



MULTI-MEDIA STUDIO EASEL

assembly instructions


For model AA13441

hardware

No tools required

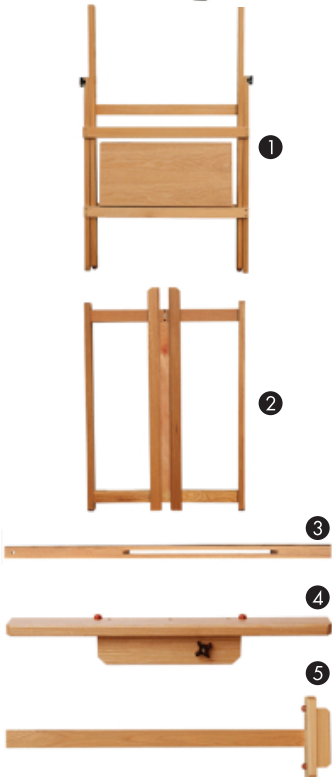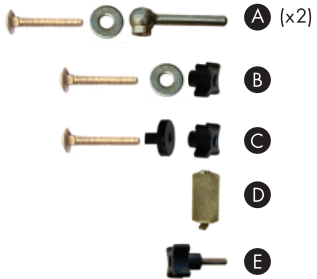

1




Unfold so legs are fully extended. (If necessary, first loosen the knobs at the joint where the legs meet.)

2




Tighten the knobs to stabilize.

2

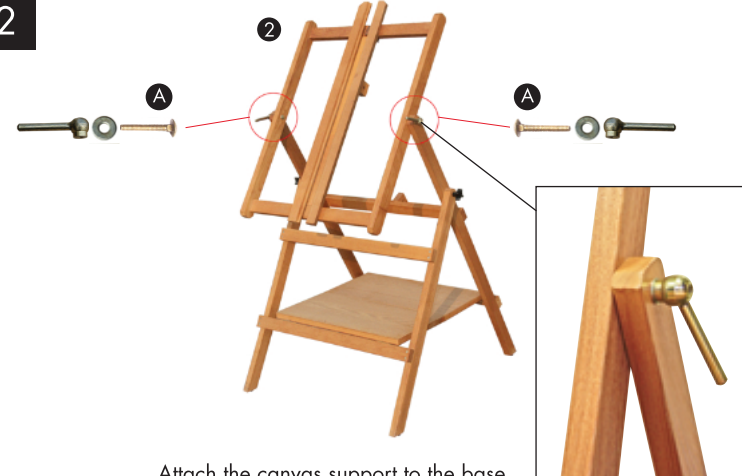

Attach the canvas support to the base.

3

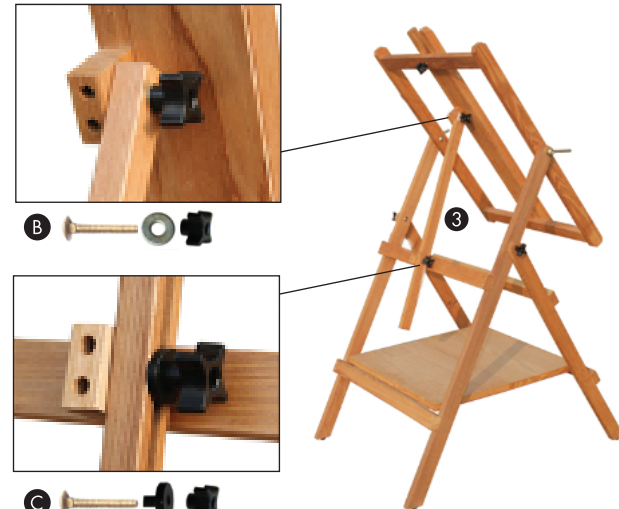


Attach the mast to the base and the canvas support.

4



Attach the canvas tray by inserting the fastener into the channel on the canvas support.

5

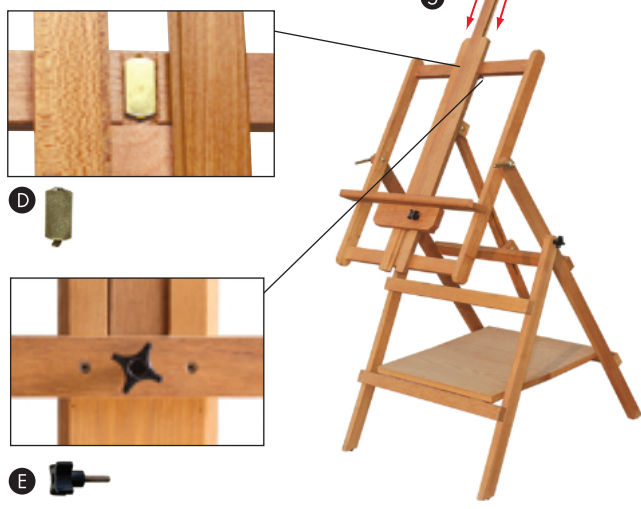

Insert the knob and protective plate, then slide the top of the canvas tray into the channel on the canvas support.